

IMPORTANT NOTICE

- Before operating the unit, please read these instructions carefully.
- Retain the manual for future reference.
- You are advised to follow the instructions carefully when operating the unit.
- Do not use any chemical solvent, clean agent or corrosive detergent to clean away dirt of the surface of the screen. By doing so, you may cause irreversible damage to the surface of the TFT screen. To clean off dirt or fingerprints, we recommend the use of a soft damp lens cleaning cloth.
- Using spare parts from another manufacturer may cause permanent damage to the unit.
- When operating the display unit, avoid touching or pressing the LCD glass panel. Excessive force may cause irreparable damage to the LCD screen.
- It is unlawful in most jurisdictions for a person to drive a motor vehicle which is equipped with a screen that is located in the motor vehicle at any point forward of the back of the driver's seat, or that is visible, directly or indirectly, to the driver while operating the vehicle. In the interest of safety, this monitor should never be installed where it will be visible, directly or indirectly, by the operator of the motor vehicle.
- Lock the LCD screen in the fully closed position when not in use.
- **Remember to leave the dome light switch in the off or auto positions when the vehicle is unattended, as the dome lights can drain the vehicle's battery.**

MAIN FEATURES

- FLIP DOWN 10.2" 16:9 WIDE SCREEN TFT-LCD MONITOR
- BUILT IN 1/4 DIN Full Function DVD Player
- BULIT IN USB 1.1 PORT
- BUILT IN WIRELESS HEADPHONE IR TRANSMITTER
- 1 AUDIO/VIDEO INPUT
- 1 AUDIO/VIDEO OUTPUT
- FULL FUNCTION WIRELESS REMOTE CONTROL
- (OSD) ON SCREEN DISPLAY FOR CONTROL OF PICTURE QUALITY AND FUNCTIONS
- DOME LIGHTS

MAIN SPECIFICATIONS

DISPLAY:	10.2" wide screen TFT LCD active matrix
RESOLUTION:	800RGB(W) X 480(H)
PIXEL PITCH(mm):	0.0925(W) X 0.2775(H)
VIEWING ANGLE:	Left/Right 130°, Up/Down 45°/65°
BRIGHTNESS:	250 NITS
CONTRAST RATIO:	300:1
POWER SOURCE:	DC 12V (NEGATIVE GROUND)
POWER CONSUMPTION:	20W (Max.)
OPERATING TEMPERATURE:	0°C~60°C (32°F~140°F)
STORAGE TEMPERATURE:	-20°C~70°C(-4°F~158°F)
DIMENSIONS (W x D x H):	335x280x45 mm
NET WEIGHT:	3Kgs. (6.6lbs)

DVD PLAYER

- Supports DVD, SVCD, VCD, AUDIO CD, and MP3 format.

MEDIA PLAYER

- Support USB 1.1 Drive.
- Equipped with USB Socket.
- Plays MP3 music.
- Applies to NTSC or PAL system.


STANDARD ACCESSORIES PACKAGE CONTENTS

- Remote control (CR2025 x 1 Lithium Battery)
- Operating manual
- Power connection cable

CONTROLS & CONNECTORS


- POWER button: Press to turn the monitor on/off.
- MENU button: Press menu button to active OSD feature and select OSD features.
- UP/DOWN buttons: Adjustment buttons.
- IR Sensor: IR sensor for remote control.
- Dome lights: Provide additional interior illumination.
- Dome lights switch: Press to loop OFF / ON / DOOR.

- USB port: Plays USB 1.1 Drive.
- IR transmitter: Transmit audio to wireless headphones.
- DVD player: Plays DVD, SVCD, VCD, AUDIO CD and MP3 format.
- A/V input jack: Connecting to your Game port or any A/V device.

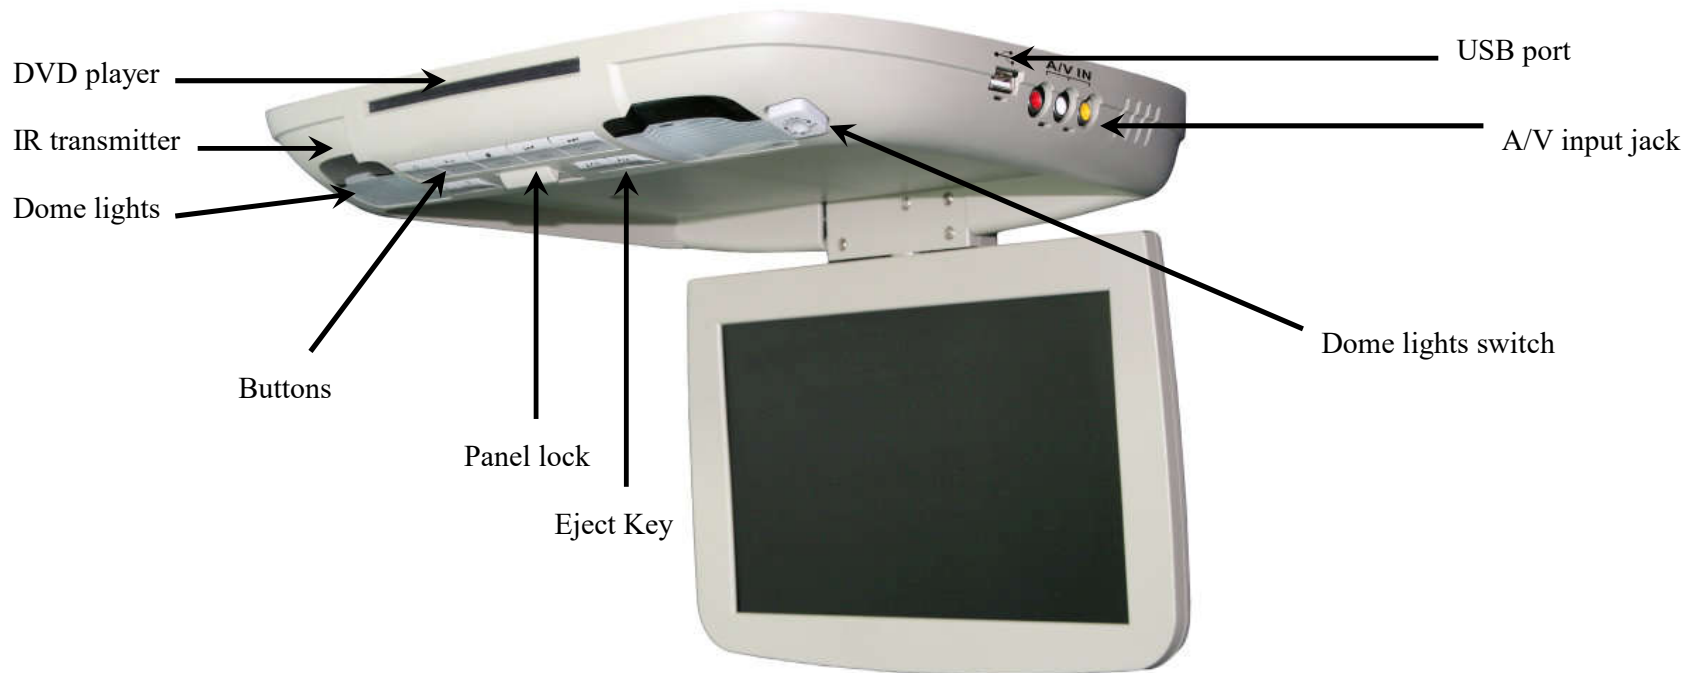

MONITOR FUNCTION DESCRIPTIONS

- 1. MUTE button**
Press to mute the audio, press the button again to restore sound to the previous audio level.
- 2. MENU button**
Press this button to activate the OSD menu screen.
- 3. MENU Adjust Up button**
- 4. MENU Adjust Down button**
Use this button to change the value of the menu option.
- 5. VOLUME UP button**
- 6. VOLUME DOWN button**
Use this button to raise the volume level of the audio output.
- 7. SOURCE button**
Press to enter the GAME input mode.
- 8. POWER button**
Press this button to turn on the monitor, press again to turn off the monitor.
- 9. DVD button**
Press DVD button to play DVD or change to USB Mode.

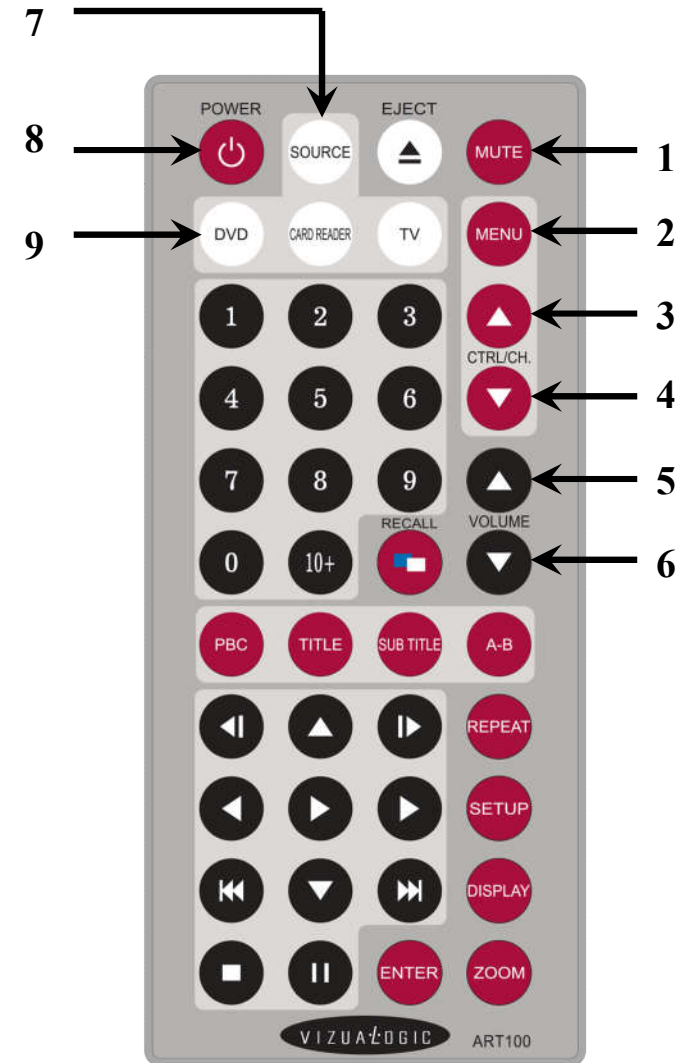

DVD FUNCTION DESCRIPTIONS

10. NUMBER buttons

Allows the user to enter the numbers 0 to 10 for selection of CD track, DVD chapters, and password setting.

11. PBC button

Allows the user to select the subtitle when playing the VCD 2.0 version only.

12. TITLE button

Some DVDs come with title selection. For such case, allows the user to select desired title.

13. SUBTITLE button

Allows the user to select a subtitle display in various languages.

14. BWD button

Allows the user to search in a backward direction.

15. UP button

16. FWD button

Allows the user to search in a forward direction.

17. LEFT button

18. PLAY button

Press this button to active the play mode while a disc is loaded into the disc compartment.

19. RIGHT button


20. PREVIOUS button

Allows the user to return to the previous chapter or track.


21. DOWN button

22. NEXT button

Allows the user to skip to the next chapter or track.

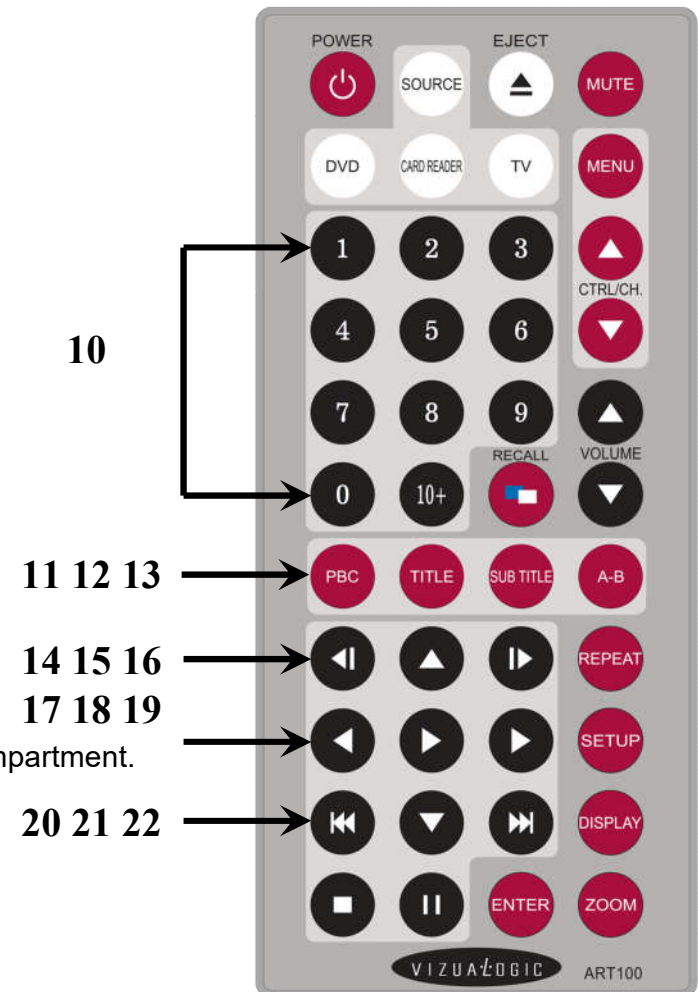

- 23. **STOP button**
DVD disc play will be stopped.
- 24. **PAUSE button**
Allows the user to pause the playback.
- 25. **ENTER button**
Press this button to confirm selection.
- 26. **EJECT button**
Press this button to eject the DVD disc.
- 27. **A-B button**
Allows the user to repeat play of a DVD or CD from point A to point B.
Press button once to set point A once again to set point B.
- 28. **REPEAT button**
Allows the user to repeat play various positions of a DVD, CD or MP3.
(Track/Chapter/All).
- 29. **SET UP button**
Allows the user to select the DVD player's options (Display, OSD language,
Defaults, Parental Control, Password, Exit Setup)
- 30. **DISPLAY button**
Press to display DVD disc current information.
- 31. **ZOOM button`**
Allows the user to zoom in or zoom out the image, press the
"LEFT/RIGHT/UP/DOWN" buttons to move the zoomed image to move
in the direction of the remaining portion of the image.

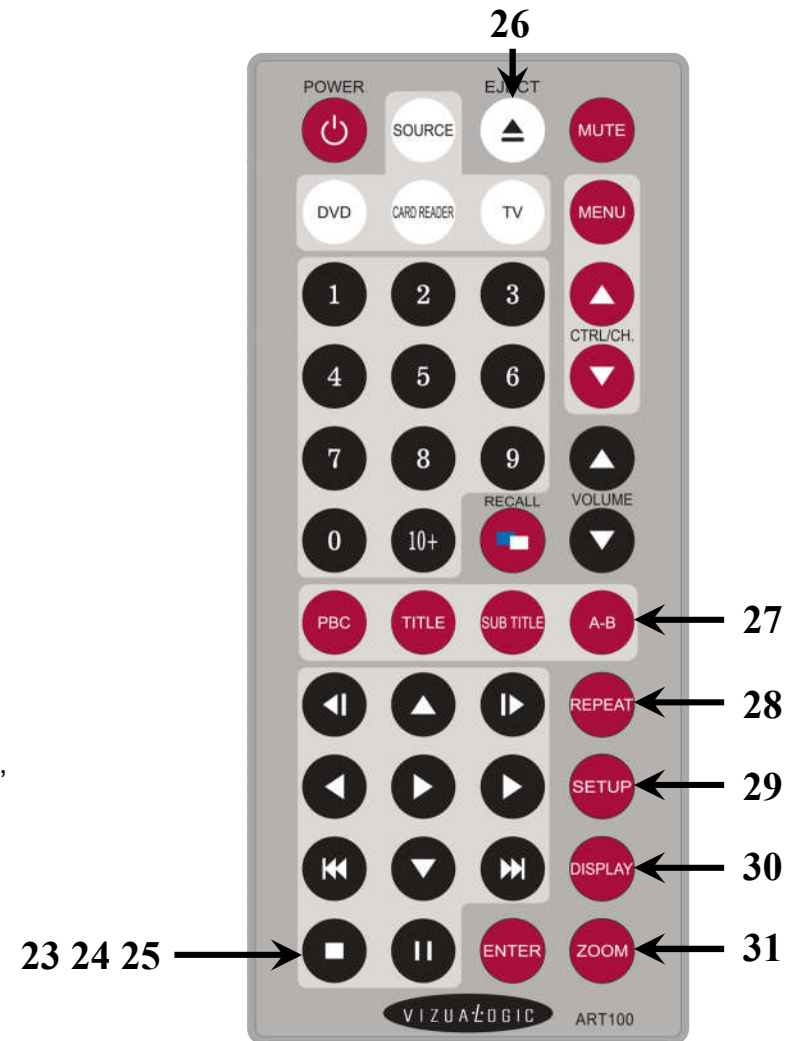

USB 1.1 DRIVE FUNCTIONS DESCRIPTIONS

32. REPEAT button

Allows the user to repeat play.

33. SETUP button

Press to enter the SETUP MENU MAIN PAGE.

34. DISPLAY button

Press to display the Media Card current information.

35. ZOOM button

Allows the user to zoom in or zoom out the image, press the "LEFT/RIGHT UP/DOWN" buttons to move the zoomed image to move in the direction of the remaining portion of the image.

36. UP button

37. LEFT button

38. PLAY button

Press this button to start the play mode of the USB drive.

39. RIGHT button

40. DOWN button

41. STOP button


USB media file play will be stopped.

42. PAUSE button

Allows the user to pause the play of "MUSIC" or "VIDEO" file.

43. ENTER button


Press this button to confirm selection.

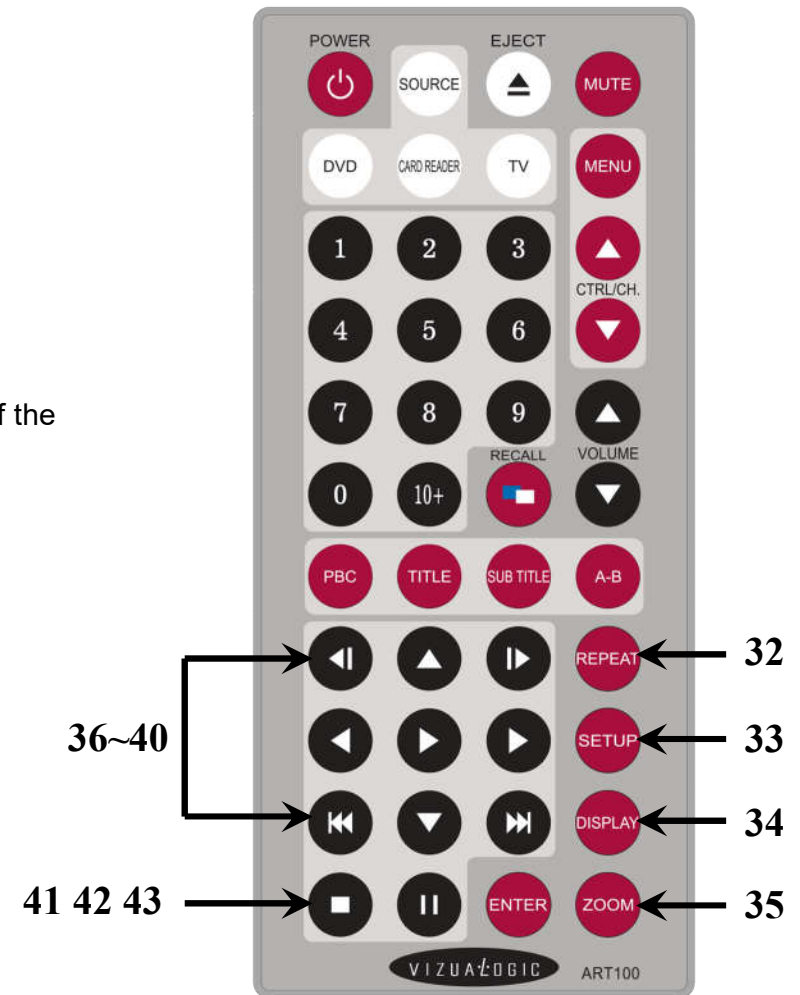

MONITOR OPERATION

Slide the screen release lock forward will unlock the LCD screen and the LCD screen will drop down slightly. Pivot the screen downward until a comfortable viewing angle is reached.

- Press the POWER button on the unit or remote to turn on the monitor.
- Press the SOURCE button to select viewing source.
- Press the MENU button to active the OSD menu shown on the LCD screen.
- Press the MENU button again to select the adjustment item, press the “▲” or “▼” button to enter the sub menu and adjust function/value.
- “FM PRESET”: press the “▲” button to select M1 ~ M6; press “▼” button 1 sec. to change present FM channel or press “▼” button more than 2 sec. to cover and save a new FM channel.

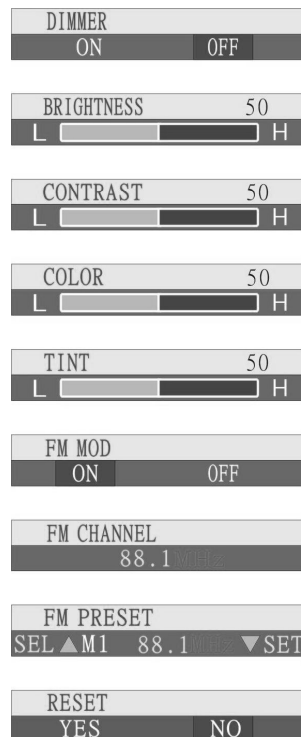

MENU Display

OVERHEAD DOME LIGHTS

The lights are controlled by a bush button switch. Push the button to change “ON” → “DOOR” → “OFF” function by loop. The “ON” function will turn the lights on. The “OFF” position will prevent the lights from turning on at all times, and the “DOOR” or “AUTO” position will allow the lights to turn on and off with the vehicle’s interior lighting. Do not leave the vehicle unattended with the dome light switch in the “ON” position, as this could result in a discharged battery.

DVD OPERATING

The DVD player has the ability to play DVD, VCD, Audio CD and MP3 audio. Make sure you read this section completely before using the DVD section.

REGIONAL CODING

Both the DVD player and DVD disc are coded by region. These regional codes must match in order for the disc to play. If the codes don’t match, the disc won’t play. This DVD player will only region 1 DVD disc.

TO PLAY A DVD OR VCD

- Press the DVD button on the remote control.
- Insert DVD or VCD disc (Label Up), the disc will automatically load.
- Press the “PLAY” button on the remote to play selected title.

NOTE: The On Screen Display will show “INVALID DISC” if the disc region code does not correspond with the unit setting.

- Press the “PAUSE” button to pause, press the “PLAY” button to resume play.
- Press the “STOP” button to stop play.

ADJUST DVD SETUP MENU

DVD SETTING AND ADJUSTMENT


This chapter describes how to set and how to adjust using the on-screen SETUP menu.

Using the Setup Menu:

- Press the SETUP button to display the “SETUP” menu on the display screen.
- Select the main item you want using the cursor (◀ ▶) button, and then press the ▼ button.
- To exit setup menu, press SETUP button on the remote again.

OSD (ON-SCREEN DISPLAY) LANGUAGE MENU

The OSD Language Menu allows the user to select the language for the on-screen display. Press SETUP and then use the (◀ ▶ ▼ ▲) button to select the desired language.

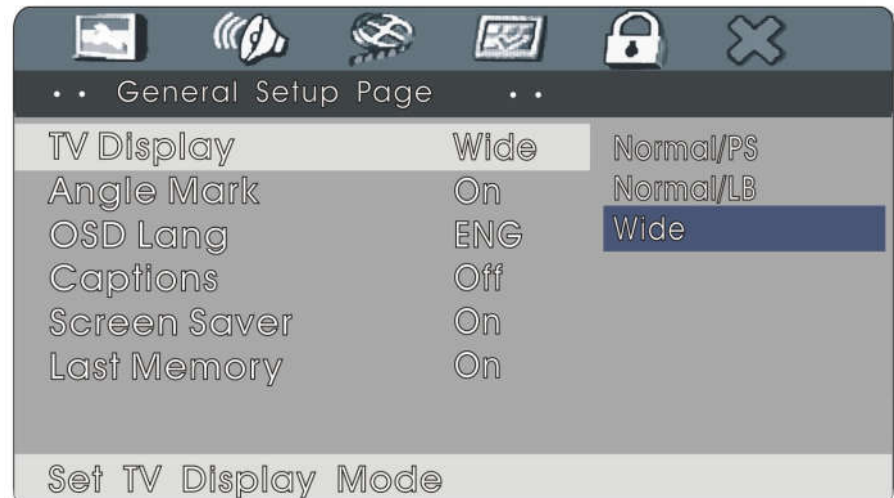

General Setup Page

TV Display	Wide	
Angle Mark	On	On
OSD Lang	ENG	Off
Captions	Off	
Screen Saver	On	
Last Memory	On	

Turn Angle Mark On

General Setup Page

TV Display	Wide	
Angle Mark	On	
OSD Lang	ENG	English
Captions	Off	French
Screen Saver	On	Spanish
Last Memory	On	

Set OSD Language

General Setup Page


TV Display	Wide	
Angle Mark	On	
OSD Lang	ENG	
Captions	Off	On
Screen Saver	On	Off
Last Memory	On	

Functions With The Caption TV

General Setup Page



TV Display	Wide	
Angle Mark	On	
OSD Lang	ENG	
Captions	Off	
Screen Saver	On	On
Last Memory	On	Off

Screen Saver

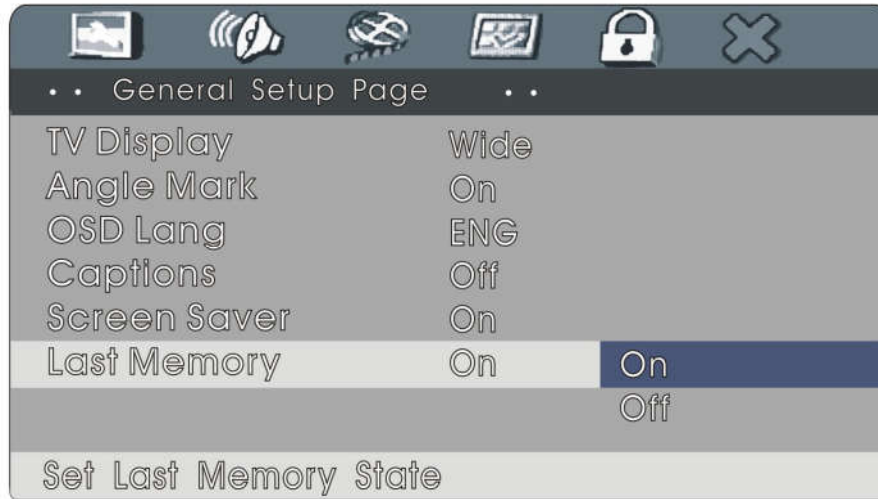

AUDIO SET UP

Press the SETUP button and select AUDIO. The AUDIO SETUP allows you to change the speaker setup and HDCD. Press (◀ ▶ ▾ ▲) button to select.

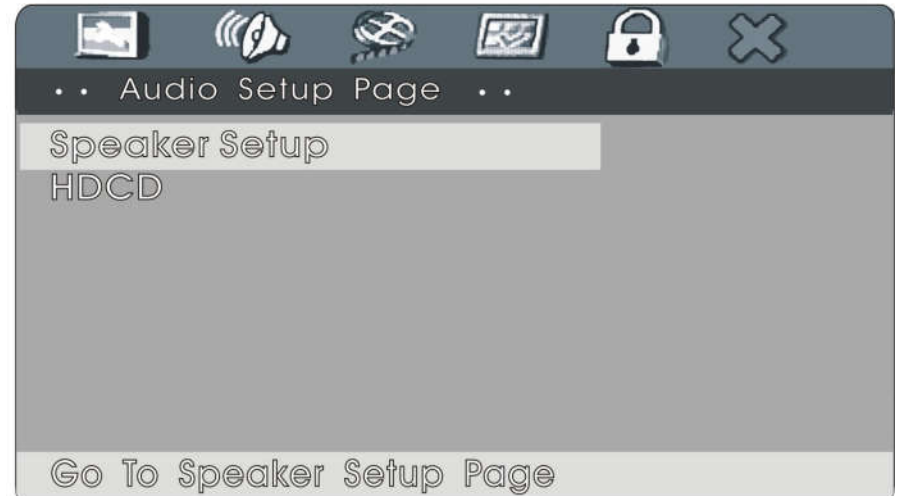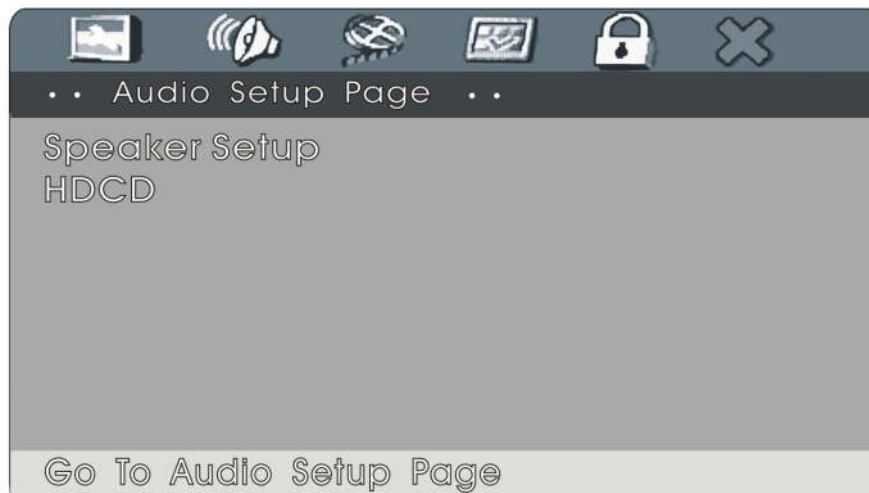

Speaker Setup Page

Dnwnmix	LTRT	LT/RT
		Stereo

Set Downmix Mode

Audio Setup Page

Speaker Setup

HDCD

Go To HDCD Setup



HDCD Setup Page

Filter	Off	Off
		44.1K
		88.2K

Filter

VIDEO SET UP

Press the SETUP button and select VIDEO. The VIDEO SETUP allows you to change the quality. Press (◀ ▶ ▼ ▲) button to select.

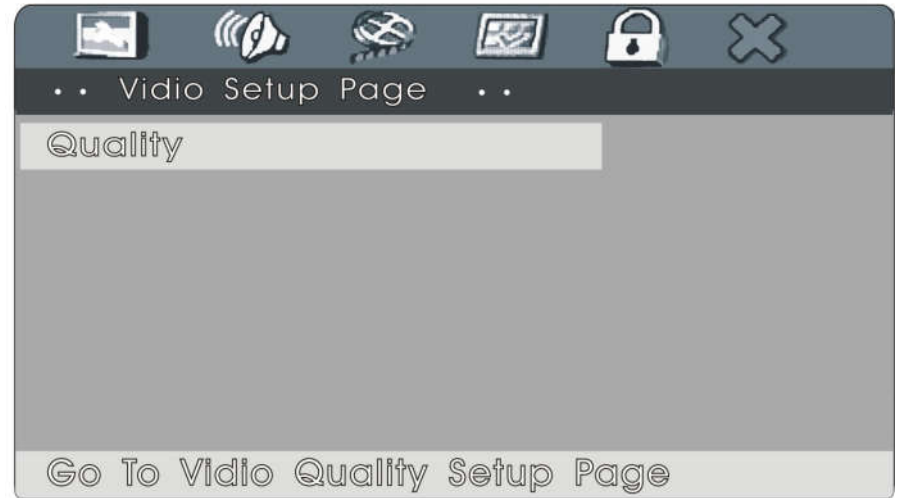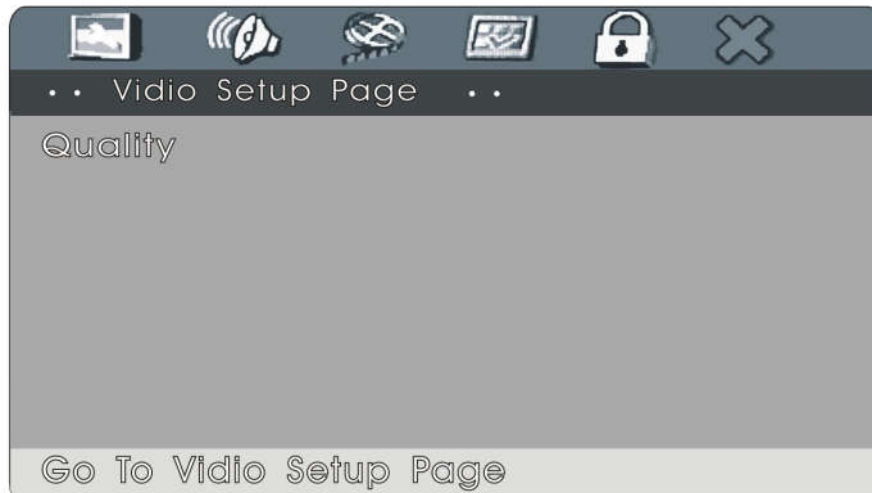

Video Quality Setup

Sharpness	Low
Brightness	00
Contrast	00
Gamma	None
Hue	00
Saturation	00
Luma Delay	1 T

Contrast

Video Quality Setup

Sharpness	Low	
Brightness	00	
Contrast	00	
Gamma	None	High
Hue	00	Medium
Saturation	00	Low
Luma Delay	1 T	None

Gamma

Video Quality Setup

Sharpness	Low
Brightness	00
Contrast	00
Gamma	None
Hue	00
Saturation	00
Luma Delay	1 T

Hue

Video Quality Setup




Sharpness	Low
Brightness	00
Contrast	00
Gamma	None
Hue	00
Saturation	00
Luma Delay	1 T


Saturation



PREFERENCE SET UP




THIS SETTING HAVE TO STOP PLAYING DISC. Press the SETUP button and select Preference. The Preference SETUP allows you to change the quality. Press (◀ ▶ ▼ ▲) button to select.

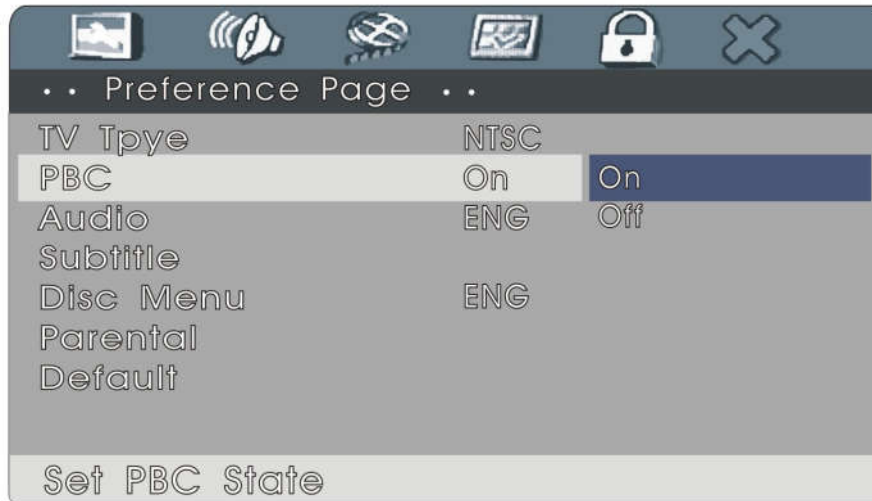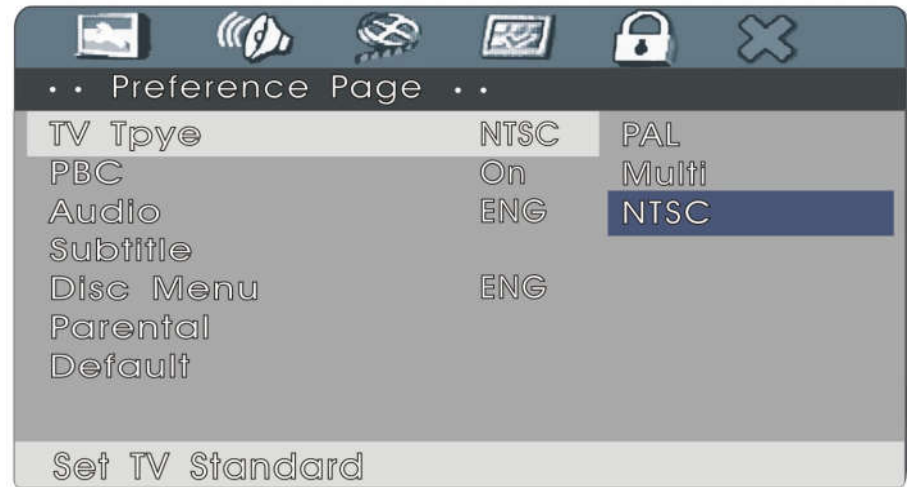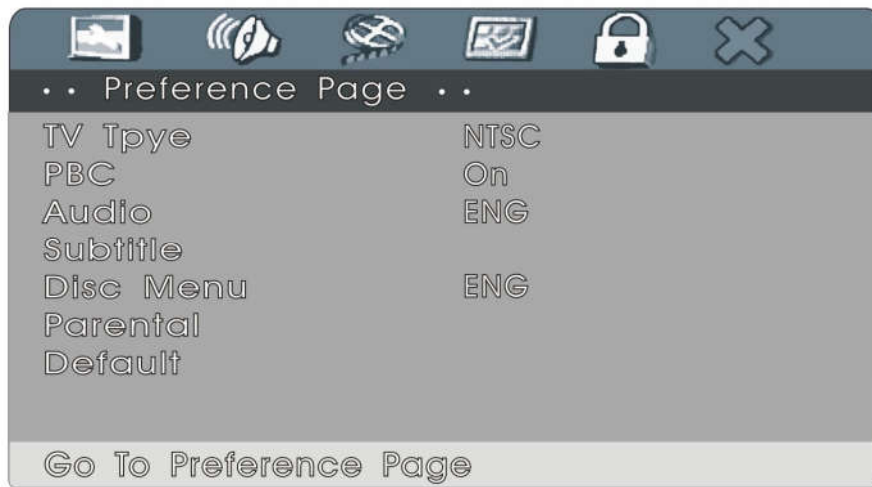

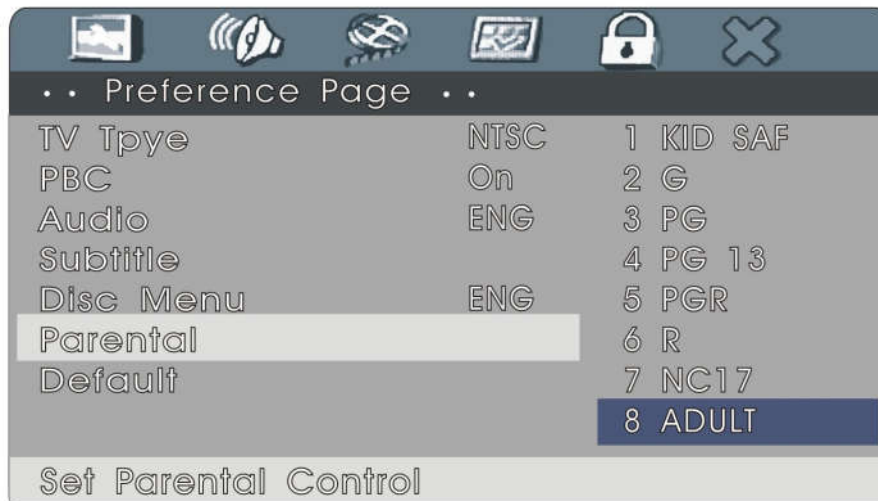

NEW PASSWORD SET UP (PARENTAL CONTROL PASSWORD)

Press the SETUP button and select PASSWORD. The PASSWORD SETUP allows you to change the parental control password. Press **▶** and then press number and then Enter to implement it.

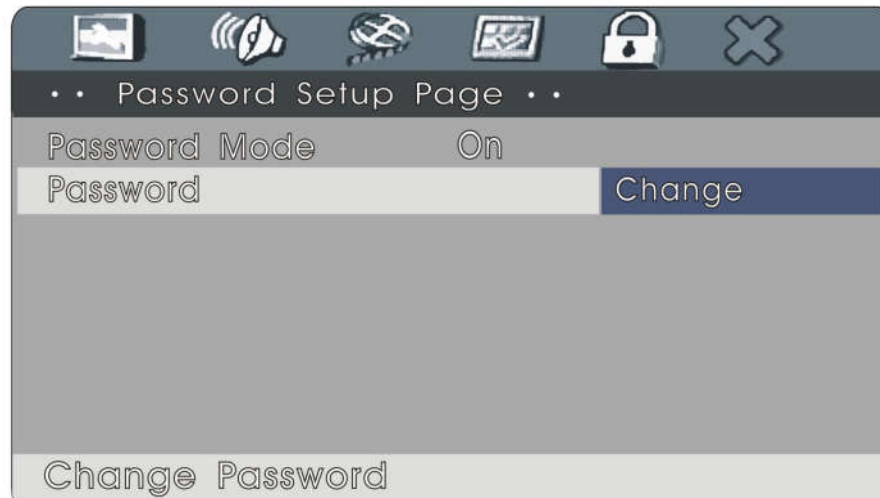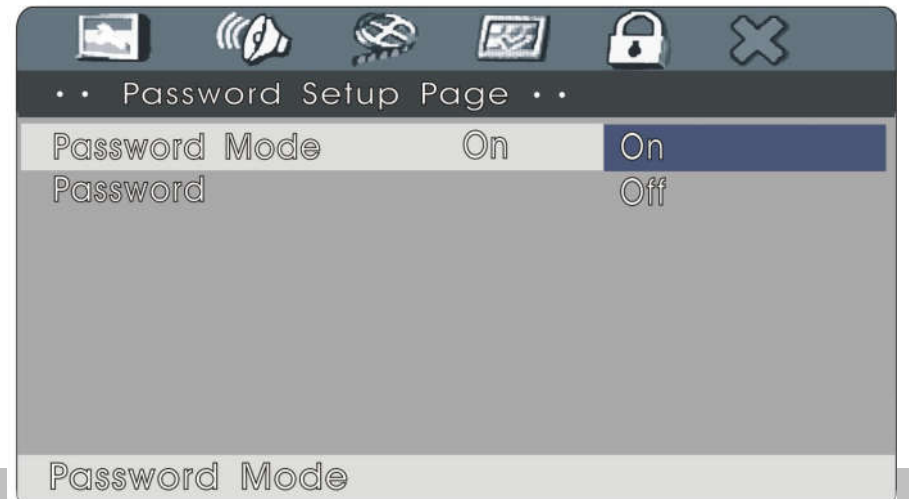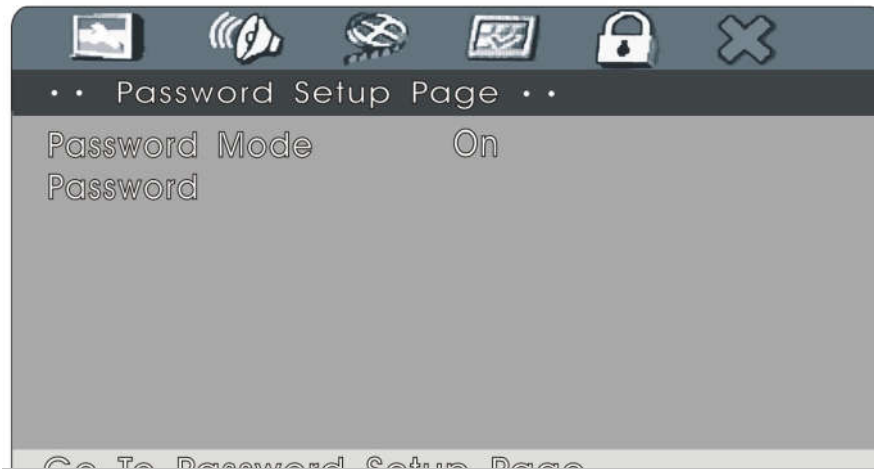

AUDIO / MP3 CDs

PLAYING AUDIO CDs

When playing an audio CD, It displays the current track and time for that track playing.

USING THE REPEAT FEATURE

The default mode for the Repeat feature is OFF. Pressing REPEAT consecutively changes the repeat options:

- ✧ *REP-ONE*-repeats the track that is playing.
- ✧ *REP-ALL*-repeats the disc that is playing.
- ✧ *REPEAT OFF*.

The repeat option changes every time REPEAT is pressed. When the track/tracks has/have ended, the selected repeat option loops repeatedly until you turn it off.

PLAYING MP3 DISCS

MP3 is a format for storing digital audio. An audio CD-quality song can be compressed into the MP3 format with very little loss of quality, while taking up much less space. CD-R discs that have been encoded in MP3 format can be played on your DVD player.

Press the DISPLAY button on the remote to DISPLAY Banner. The options below show you what happens when you press the DISPLAY button.



SELECTING FOLDERS AND SONGS

When an MP3 disc is inserted in the player, the monitor appears automatically. You can change folders and songs through screen. The DVD player plays the songs in order they were burned on to the disc.

- ✧ If a disc is playing, press STOP. Press the up or down arrow button to go through the folder list on the right side of the screen.
- ✧ Once the folder you want is highlighted, press Enter (the folder list shifts to the left side of the songs in the folder appear on the right).
- ✧ Press the up or down arrow button to go through the song list and highlight the song you want. Press Enter to begin playback of the highlighted song.

SKIPPING SONG

Use the next (▶▶) button on the remote control to move to the next song. Use the Previous (◀◀) button to move the beginning of the


currently playing song. Press the  button 2 times to move to the previous song.

USING THE REPEAT FEATURE

The default mode for the Repeat feature is OFF. Pressing REPEAT consecutively changes the repeat options:

- ✧ Repeat ONE - repeats the song that is playing.
- ✧ Repeat Folder - repeats the folder that is playing.
- ✧ Folder - repeats all folders that is playing.
- ✧ Shuffle.
- ✧ Random.

USB 1.1 DRIVE OPERATION

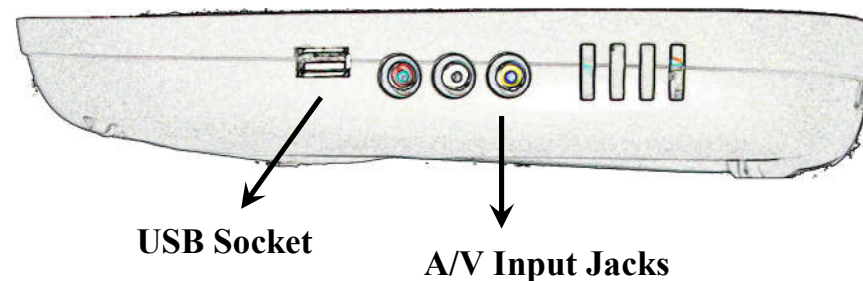

- Insert a USB 1.1 Drive into the proper socket as shown on the above figure. Use caution when inserting Digital Media Card into the port.

- Press the DVD button on the remote control.
CAUTION: USB Socket can be damaged if the wrong side is inserted or it is force in.
- It will automatic reading files from USB.
- Press the “▲ ” or “▼ ” buttons to highlight the source, press the “PLAY” button to start playing your selection.

MP3 Music



- Highlight the MUSIC mode and press the “PLAY” button to start playing your music.
- The MUSIC LIBRARY menu will display on the screen.
- Press the “DISPLAY”, track information will be shown on the screen. Press the “DISPLAY” button again to go back to the MUSIC LIBRARY MENU.
- Press the “REPEAT” button to change music repeat mode.

OTHER INFORMATION

A/V INPUT

- Connect your Game A/V output to the A/V input jacks.
- Press the “SOURCE” button on the remote control to select the GAME mode.

WIRELESS IR HEADPHONE TRANSMITTER

This monitor includes a built in Wireless IR transmitter, for use with our wireless headphones (Part number: 90-3095). The volume can be adjusted using the controls on screen. The wireless headphones must be used within a line of sight from the transmitter, as infrared transmissions like visible light travel only in a straight line.

FM MODULATOR

The audio sound forms your vehicle's sound system by tuning your vehicle's radio to the selected FM frequency.

This feature is accessed by using the remote control enter the "Fm Mod." mode to set the selected frequency. (full channels to select).

(Channels from 88.1 to 107.9)

AV OUTPUT

This monitor provides a video/audio output for an optional monitor (such as headrest monitors). This output will provide a video/audio signal that duplicates the signal displayed by this monitor to an optional monitor.

LIMITED THREE-YEAR WARRANTY (NON-TRANSFERABLE)

Vizualogic, LLC warrants to the original purchaser a non-transferable warranty to repair or replace, free of charge, the video product(s) in materials and workmanship under normal use and conditions for a period of three (3) years from date of purchase.

Limited warranty excludes:

- Labor cost for removal, reinstallation, and trouble shooting of the video product(s).
- Damage to DVD discs, CDs, videotapes, accessories, or vehicle electrical parts.
- Damage due to improper installation, modification of existing equipment, abuse, neglect, or improper service.
- Damage due to accidents, fire, theft or vandalism.

TROUBLE SHOOTING

<i><u>PROBLEM</u></i>	<i><u>SOLUTION</u></i>	<i><u>PROBLEM</u></i>	<i><u>SOLUTION</u></i>	<i><u>PROBLEM</u></i>	<i><u>SOLUTION</u></i>
Poor in vehicle radio reception	<ul style="list-style-type: none"> ✧ Check the condition of the vehicle's radio antenna. ✧ Verify that the antenna is fully raised. ✧ Try change the FM modulators frequency from the OSD menu. 	No sound or distorted sound	<ul style="list-style-type: none"> ✧ Make sure your DVD player is connected properly. Make sure all cables are securely inserted into the appropriate jacks. ✧ If you are using the IR headphones, make sure you turn on the IR power. ✧ Make sure Modulator's frequency has been proper selected. 	Picture is distorted	<ul style="list-style-type: none"> ✧ The disc might be damaged. Try another disc. ✧ It is normal for some distortion to appear during forward or reverse scan.
IR sensor inoperative	<ul style="list-style-type: none"> ✧ Verify that the batteries in the remote are fresh ✧ Verify that the remote sensor eye is not obstructed. 	Can't advance through a movie	<ul style="list-style-type: none"> ✧ You can't advance through the opening credits and warning information that appears at the beginning of movies because the disc is programmed to prohibit that action. 	No forward or reverse scan	<ul style="list-style-type: none"> ✧ Some discs have sections that prohibit rapid scanning or title and chapter skip. ✧ If you try to skip through the warning information and credits at the beginning of a movie, you won't be able to. This part of the movie is often programmed to prohibit skipping through it.
Disc won't play	<ul style="list-style-type: none"> ✧ Insert a disc with the label side facing up. ✧ Check the type of disc you put into disc tray. This DVD only plays DVD's, audio CDs and MP3s. ✧ Both the unit and the disc are coded by region. If the regional codes doesn't match, the disc can't be played. This DVD play is Region Number 1 	Invalid key appears on screen	<ul style="list-style-type: none"> ✧ The feature or action can't be completed at this time because: <ol style="list-style-type: none"> 1. The disc's software restricts it. 2. The disc's software doesn't support the feature. 3. The feature is not available at the moment. 4. You've requested a title or chapter number that is out of range. 		
Play starts, but then stops immediately	<ul style="list-style-type: none"> ✧ The disc is dirty. Clean it. ✧ Condensation has formed. Allow player to dry out. 				

The Equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The user should not modify or change this equipment without written approval from CENEC CORP.
Modification could void authority to use this equipment.

NOTES

NOTES
