

Owners Manual


VIZUALOGIC™

Table of Contents

Table of Contents.....	1..
Introduction.....	2-3.
Getting Started.....	4-5.
How To Navigate The Home Screen.....	6-8.
How To Play A DVD Movie.....	9-11.
How To Setup SmartDVD.....	12-14.
How To Use Your Wireless Headphones.....	15.
How To Use The Source Tab.....	16..
How To Use The FM Transmitter.....	17.
Connecting To Wi-Fi.....	18-19.
How To Turn On Bluetooth.....	20.

Introduction

Thank you for choosing Vizualogic. We recommend that you take the time to get to know your New Rear Seat Infotainment System by reading this manual. The more that you know about it, the easier it is to operate.

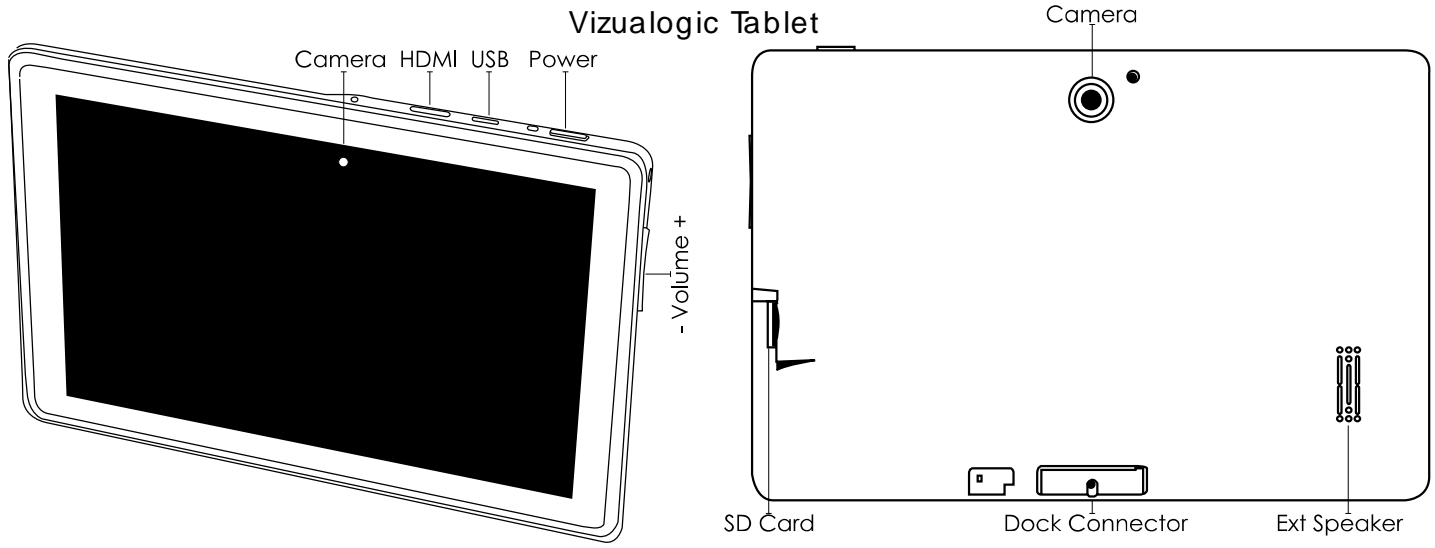


Camera: Take pictures or video Skype.
HDMI: Plug in a Micro HDMI cable to view Tablet image on TV.
USB: Plug a Micro USB cable to charge the Tablet or to connect to a PC.
Power: Power ON/OFF the Tablet or put into sleep/wake up.


Camera: Take pictures.
SD Card: Plug in a Micro SD for more storage.
Note: Cant exceed 32 GB
Dock connector: Plugs into Headrest dock.
Ext Speaker: Audio from the Tablet when not docked.

Introduction Cont.

Vizualogic Headrest

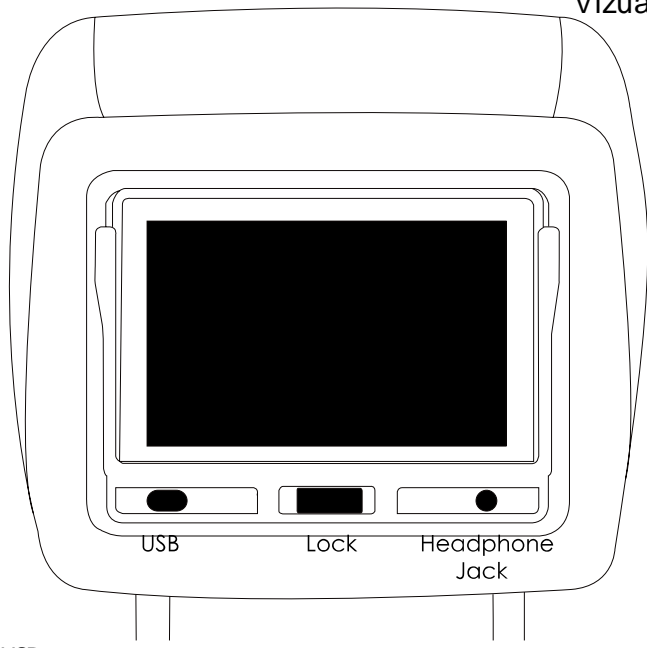

- USB** Plug in any standard Type A USB peripheral, not to exceed 2.0 Amps.
- Lock** When Tablet is docked, slide lock switch to the right to un-lock Tablet to remove.
- Headphone Jack** Plug any 3.5 Headphones for Audio Playback.

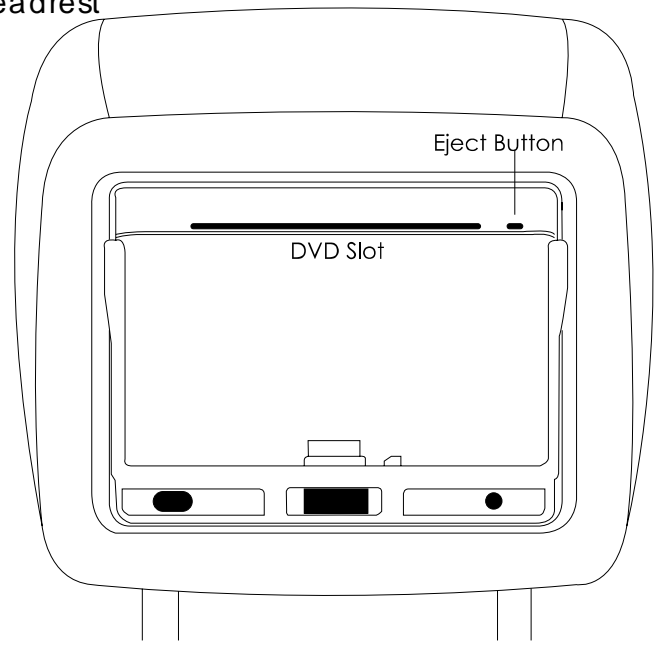

- DVD Slot** Insert DVD with Label facing the back of the vehicle.
- Eject Button** Press to eject the DVD.
Note: Tablet must be powered on and docked for eject button to work.

Getting Started

In this section we will explain how to Dock and Undock the Tablet into the Headrest.

1. Start with opening the Dock tray. With 2 hands grab hold of the pull tabs and pull the tray forward. (Fig 1)
2. Slide the Tablet into the tray making sure the Tablet dock connector is on the bottom. (Fig 2)
3. Push the Tablet down until you hear the lock engage. (Fig 2)

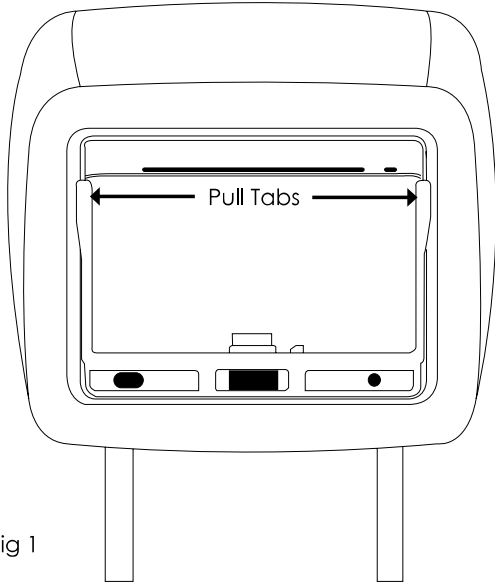


Fig 1

Vizualogic Headrest

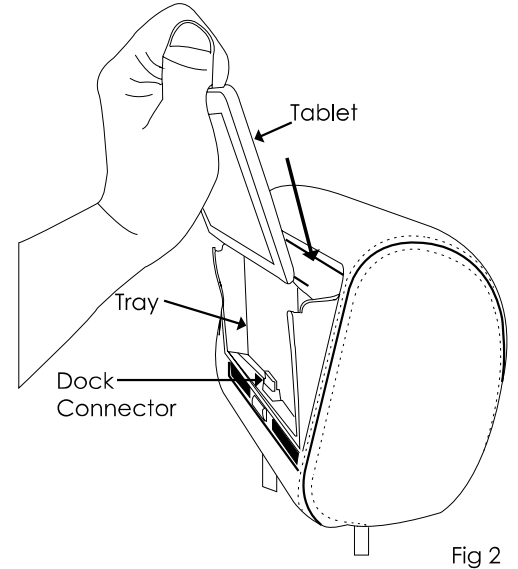


Fig 2

Getting Started Cont.

4. To remove the Tablet slide the Lock lever to the right, you should hear a small click. (Fig 1)
5. Pull on the 2 pull tabs to pull the tray forward. (Fig 1&2)
6. Place the palm of your hand in front of the Tablet camera, then grab the back side. (Fig 2)
7. Pull straight up to release the Tablet.

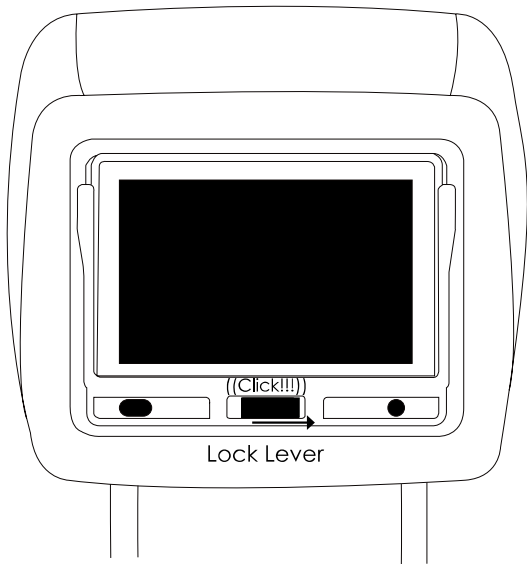


Fig 1

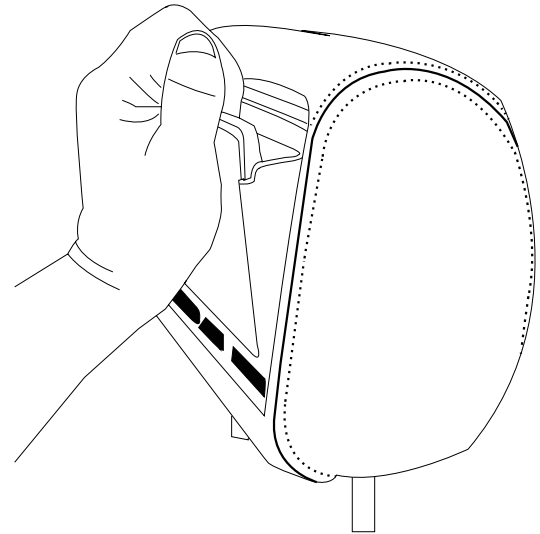


Fig 2

How To Navigate The Home Screen

Your Vizualogic Tablet supports standard Android navigation. This section will teach you how to control the Tablet when docked in the vehicle.

Note: When undocked Tablet reverts to standard Android screen.

1. Navigation bar: These icons provide common navigation functions, such as return to the previous screen, open the main Home screen, and view recently opened apps.
2. Notification bar: Notification icons show what channel your IR headphones need to be on, if the DVD is connected, or if there are any devices connected to the USB.
3. System bar: System icons show the Wi-Fi signal strength, battery level, Bluetooth connectivity, the Time and other statuses.



- Speaker -: Turns volume down
- Back: Return to previous screen
- Home: Return to the main Home screen
- Recent Apps: View apps that are currently open, in order of recent use
- Speaker +: Turns volume up
- SOURCE** Source: View the Other Tablets source
Note: Both Tablets can't be sourced at the same time

How To Navigate The Home Screen Cont.

In this section we will explain how to move new downloaded games into the My Games folder.

1. Touch the Apps icon on the Home screen. (Fig 1)

You should now see all the apps that are available in the Tablet.

2. Find the app you wish to move. (We will be using Angry Birds for this example)


3. Touch and hold the Angry birds icon. (Fig 2)

Continued on next page



Fig 1

Home Screen

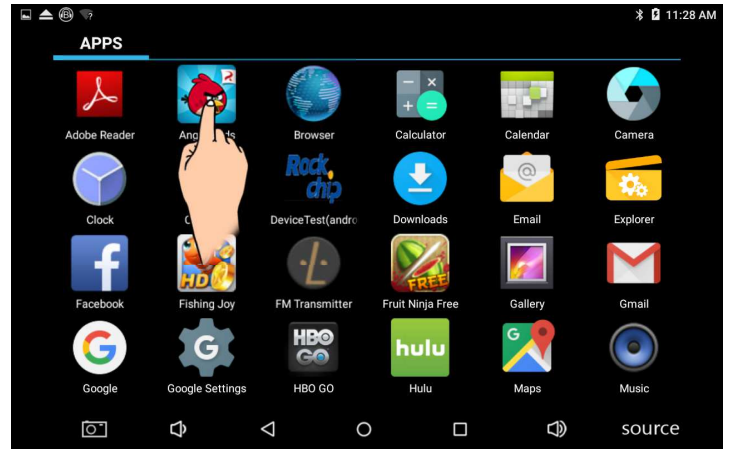

All Apps

Fig 2

How To Navigate The Home Screen Cont.

4. While your finger is holding down the icon your Home screen will now appear. (Fig 1)
 5. Move your finger over the My Games icon, then release your finger. (Fig 2)
The Angry birds app is now located in your My Games folder.
- Note: You can put as many games in the folder until it fills the screen
6. Wi-Fi media is also a folder. To add more Wi-Fi apps follow the same steps as 2-5.

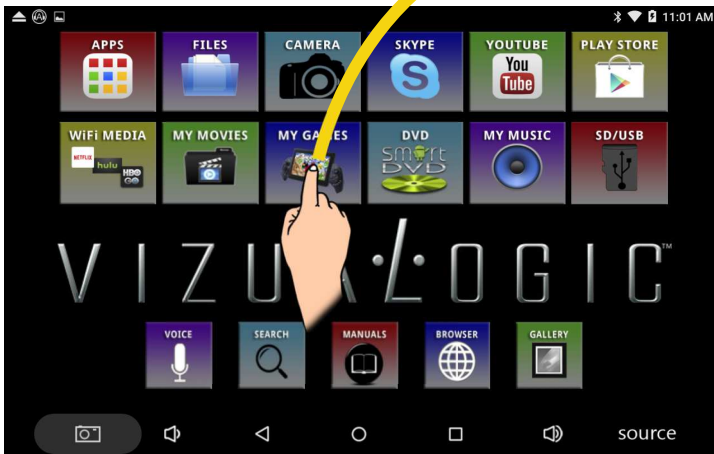


Fig 1

Home Screen



Home Screen with My Games

Fig 2

How To Play A DVD Movie

Each Headrest is equipped with a DVD player. In this section we will show you how to operate the DVD player.

1. Insert the DVD into the DVD slot located behind the Tablet. See page 3 DVD slot.
2. Once the DVD is inserted open the SmartDVD app located on the main Home screen. (Fig 1)
3. When you see the Ready symbol you are now ready to begin playback of the DVD.
4. Press the Play icon to start playback. (Fig 2)

Continued on next page



Fig 1

Home Screen

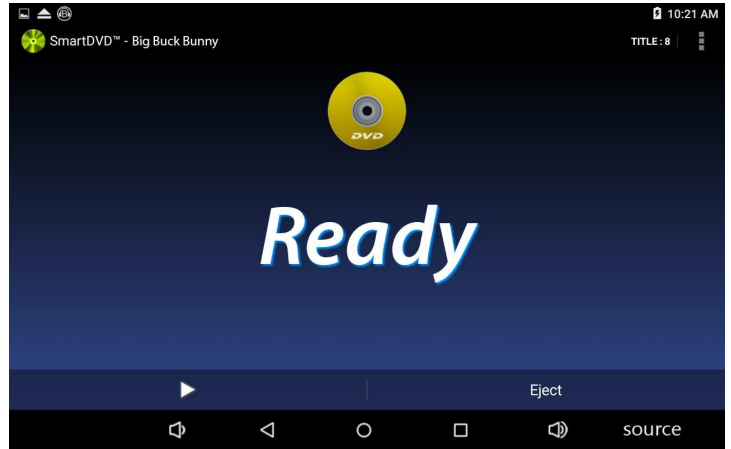


Fig 2

How To Play A DVD Movie Cont.

5. Your DVD will begin with the DVD warning info, to skip this press the Exit DVD Menu located on the top right upper corner. (Fig 1)
 6. The DVD should now show the DVD Menu. (Fig 2)
 7. Press the Play icon on the DVD Menu.
- Continued on next page

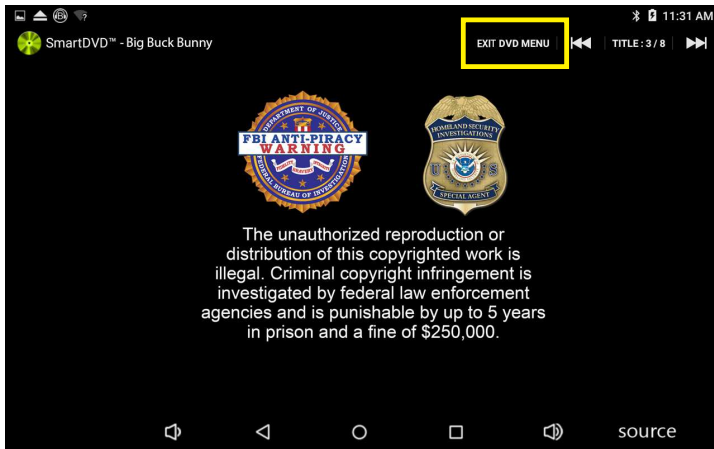


Fig 1

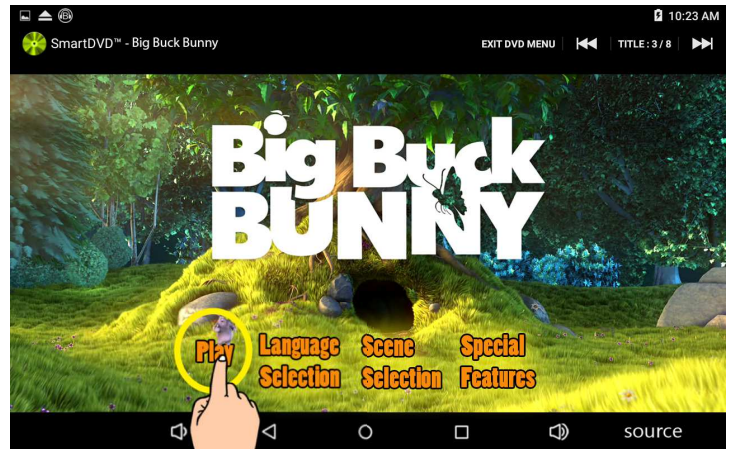


Fig 2

How To Play A DVD Movie Cont.

8. While the DVD is playing you can control the following functions using the touch screen.

a. Slide bar: Touch anywhere on the bar to advance the movie.

Note: This function may not work on all DVD's



b. Forward Arrow: This allows you to track to the next DVD track.

c. Backward Arrow: This allows you to track back to the previous DVD track.

d. Pause: This allows you to pause the DVD.

f. Stop: This allows you to stop the DVD.

Note: After DVD is stopped you can eject the DVD. (This can also be done with the eject button)

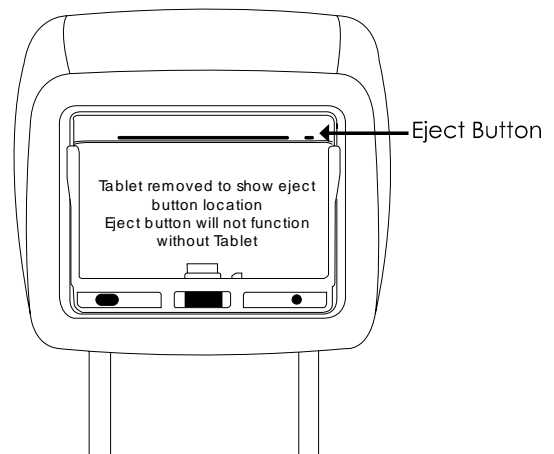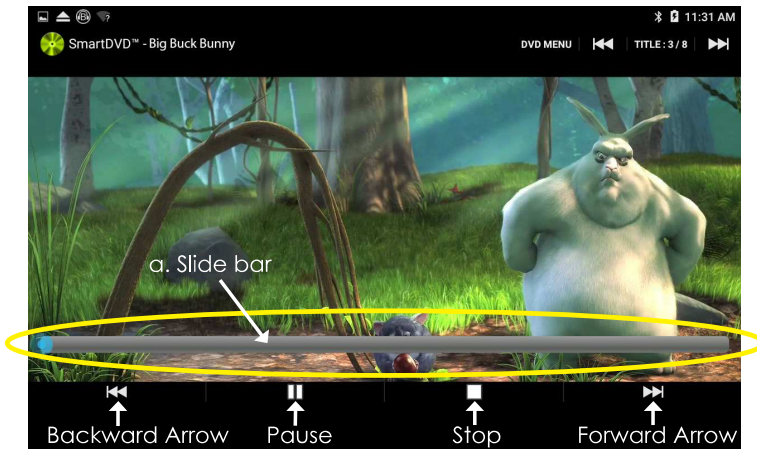

How To Setup SmartDVD

SmartDVD has a built in Preferences menu. To access this menu simply press the small 3 square dots located in the upper right corner. (Fig 1)

Note: Preference menu can only be activated when the DVD is stopped.

Follow the following steps to adjust your SmartDVD as wanted.

1. AutoPlay: Automatically plays the DVD after the set period of time.
 - a. To turn AutoPlay on touch the On icon. When it turns Blue it is ON.

Note: AutoPlay will not work until SmartDVD is restarted.

2. AutoPlay after Manual Stop: Runs the AutoPlay timer even if playback was manually stopped.
 - a. To turn AutoPlay after Manual Stop on touch the On icon. When it turns Blue it is ON.



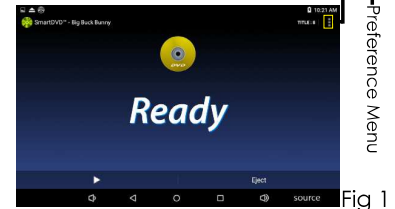


Fig 1

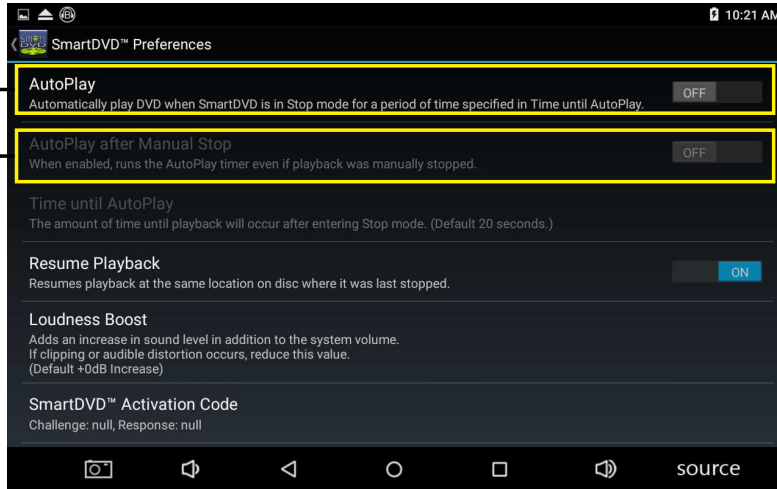



How To Setup SmartDVD Cont.

5. Loudness Boost: Increases the audio of SmartDVD.
 - a. Touch the (Loudness Boost) to open the Loudness Boost menu.
 - b. Default is set to 0db. You can choose from 0 to +5db.

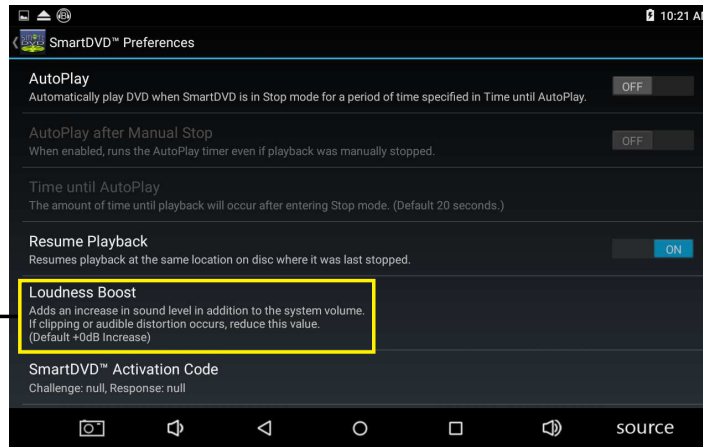

How To Setup SmartDVD Cont.

3. Time until AutoPlay: The amount of time until playback will start.
 - a. Touch the (Time until AutoPlay) icon, the menu will appear for the times you can set.
Note: Default is set for 20s.
4. Resume Playback: Resume playback where DVD was stopped.
 - a. To turn Resume Playback on touch the On icon. When it turns Blue it is ON.
Note: Default is set to On.

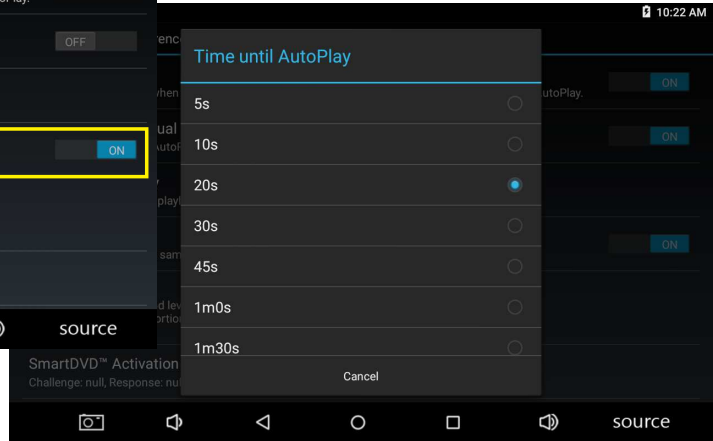
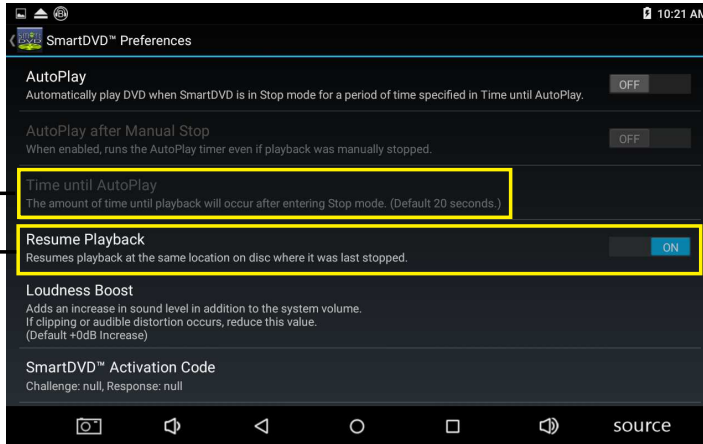


How To Use Your Wireless Headphones

Each Headrest comes with a Wireless Headphone.

In this section we will explain how to turn on the headphones and adjust the listening volume.

1. When your vehicle receives power the Tablets will display what channel the wireless headphones need to be set on.
 - a. Locate the A/B OFF switch on the Wireless Headphones.
 - b. If the Tablet is displaying channel A, then slide the switch to A.
 - c. If the Tablet is displaying channel B, then slide the switch to B.
2. To adjust the volume of the Wireless Headphones, simply move the volume wheel clock wise to raise the volume and counter clock wise to lower the volume.

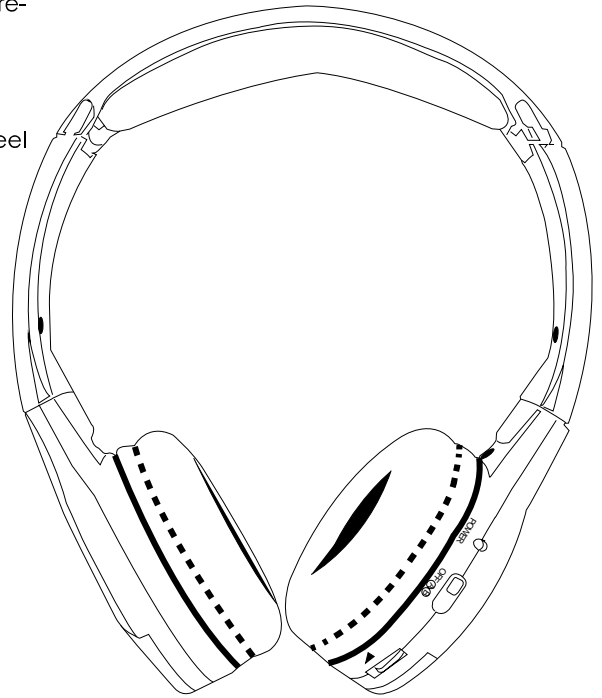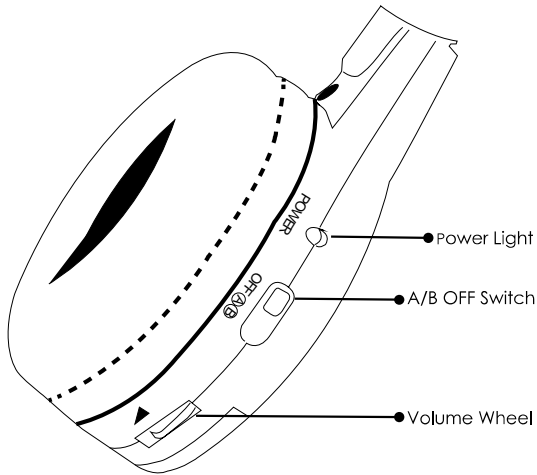

How To Use The Source Tab

Each Tablet has the ability to see the other Tablets image.
In this section we will explain how to use the Source Tab.


1. Each Tablet has the ability to view its own source. See Fig 1.
2. Each Tablet also has the ability to view the opposite Tablets source as well.
3. When there is a image being viewed on the Driver side headrest, the Passenger can view the Drivers headrest by pressing the Source Tab located on the bottom right of the tablets screen.
4. When there is a image being viewed on the Passenger side headrest, the Driver can view the Passengers headrest by pressing the Source Tap located on the bottom right of the tablets screen.

Note: Only one Tablet Source Tab can be used at one time.


If both tablets have the Source Tab on you will get a distorted looking image. See Fig 2.

To stop this simply press the Source Tab on either screen.

Note: When viewing the Source of the other Tablet you have no control of the other Tablets functions.

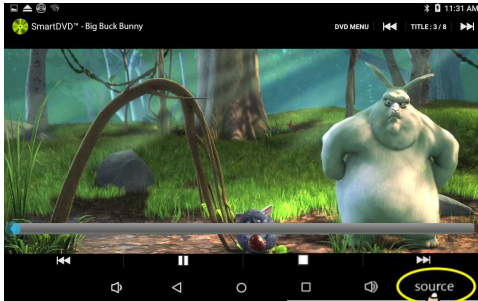

Driver Side Tablet

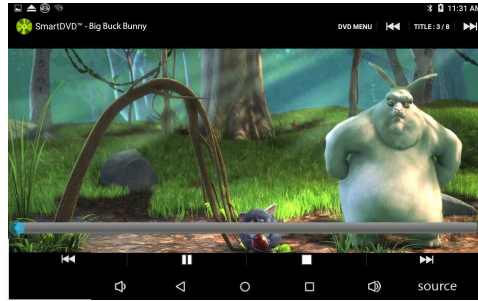

Passenger Side Tablet



Fig 1



Image of Tablet with both Sources on


Fig 2

How To Use The FM Transmitter

Each Tablet has the ability to use the FM Transmitter.

In this section we will describe how to turn on the FM Transmitter and how to adjust it.

1. To access the FM Transmitter you need to open the Apps menu from the Home screen. Fig 1.
 2. Find the FM Transmitter Icon on the apps screen. Fig 2.
 3. Touch the FM Transmitter Icon.
 4. To power on the FM Transmitter simply press the Power icon. Fig 3.
 5. To adjust the preferred frequency touch the Left or Right arrows. Fig 4.
 6. Once the desired frequency has been picked you can lock it in by touch and holding 1 of the 6 preset icons. Fig 5.
 7. Now adjust the vehicles radio to the same FM frequency.
- Note: Only 1 Tablet can use the FM transmitter at a time.

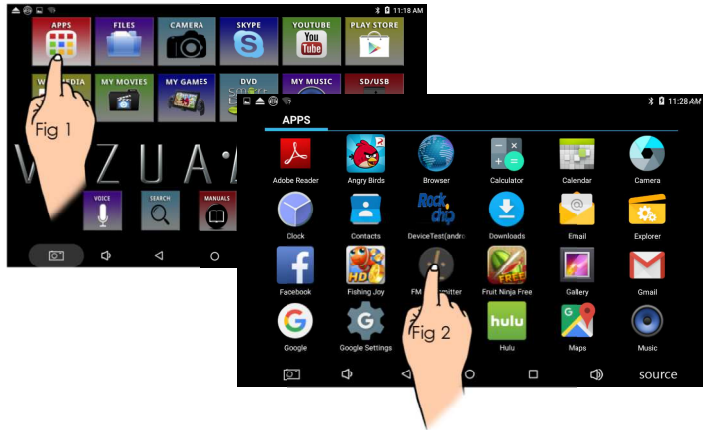

Connecting To Wi-Fi

Your Tablet scans automatically for available Wi-Fi networks and connects to known networks when you are within range. The Android operating system provides several options for connecting to Wi-Fi. This section describes the most common options.



How To Connect to Wi-Fi

1. Go to Settings icon located in the Apps menu. Fig 1.

Note: Settings is located on the second Apps page.

2. Under Wireless & Networks in the settings menu you will find the Wi-Fi, touch the Wi-Fi icon. Fig 2


3. If Wi-Fi is set to OFF touch the ON/OFF icon to turn it ON.

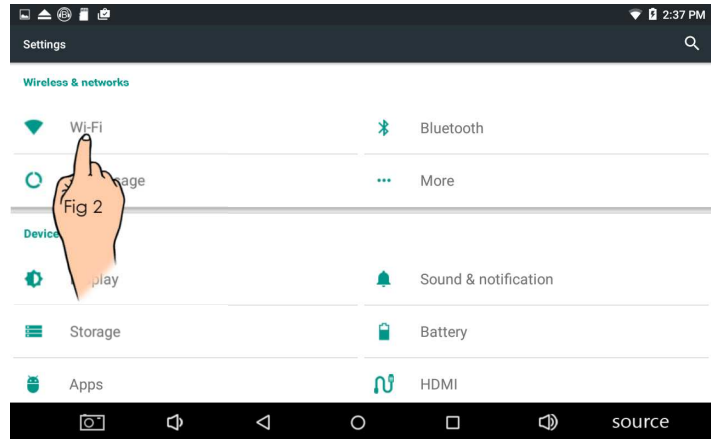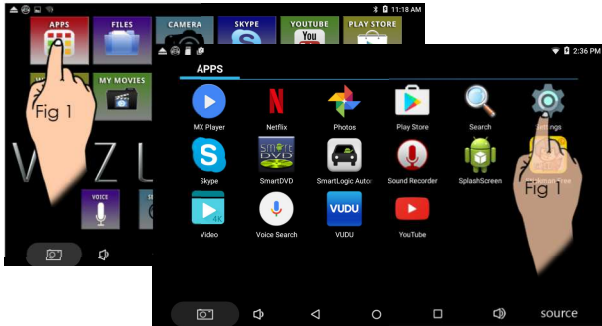

Connecting To Wi-Fi Cont.

How To Connect to Wi-Fi Cont.

4. Touch Wi-Fi, The Wi-Fi control panel shows the wireless networks that are in range and indicates their signal strength. The control panel also shows any wireless network that your Tablet has connected to in the past. If you are already connected to Wi-Fi, the name and signal strength of the current Wi-Fi network is displayed.
5. In the Wi-Fi control panel, select the network you want to connect to.
6. If prompted, enter the password and touch Connect.

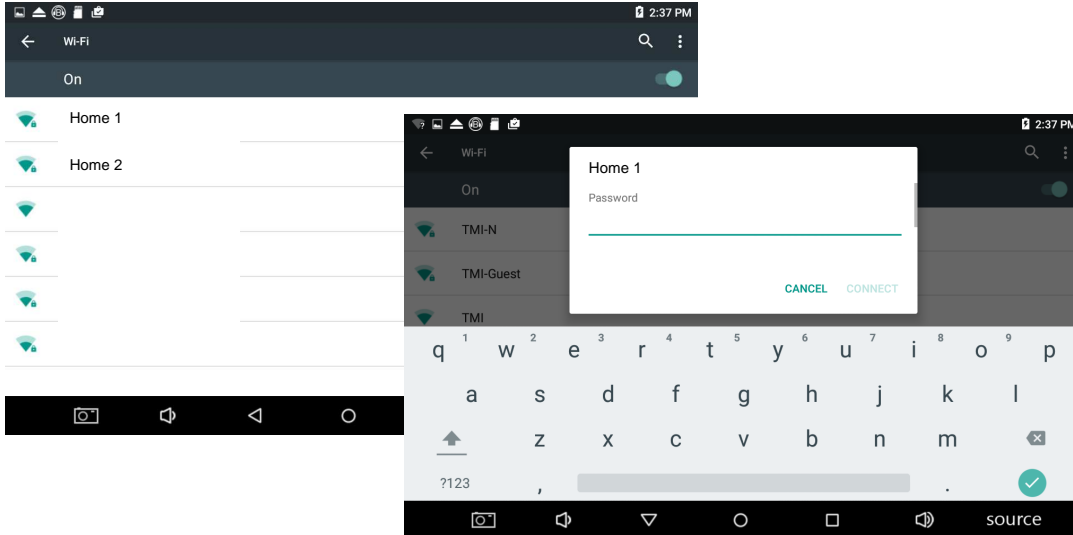

How To Turn On Bluetooth



How To Connect your Bluetooth device.

Bluetooth needs to be turned On in order to connect your Bluetooth device.

1. To turn On the Bluetooth, go to the Apps page. Fig 1.
2. Go to the Settings page. Fig 2.
3. Touch the Bluetooth icon. Fig 3.
4. Touch the Off icon to switch the Bluetooth to On. Fig 4.
5. Put your device into pairing mode. (Follow your devices instructions for pairing mode)
6. When you see your device appear on the screen, touch the name of your device.

Note: Some devices may require a password.

7. Wait for the device to say Connected. Fig 5.

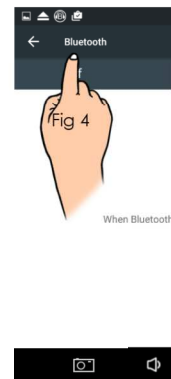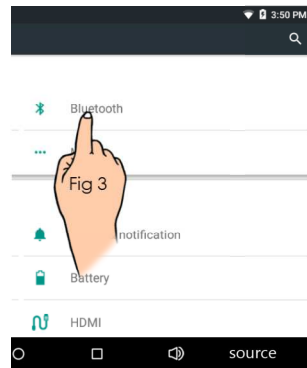






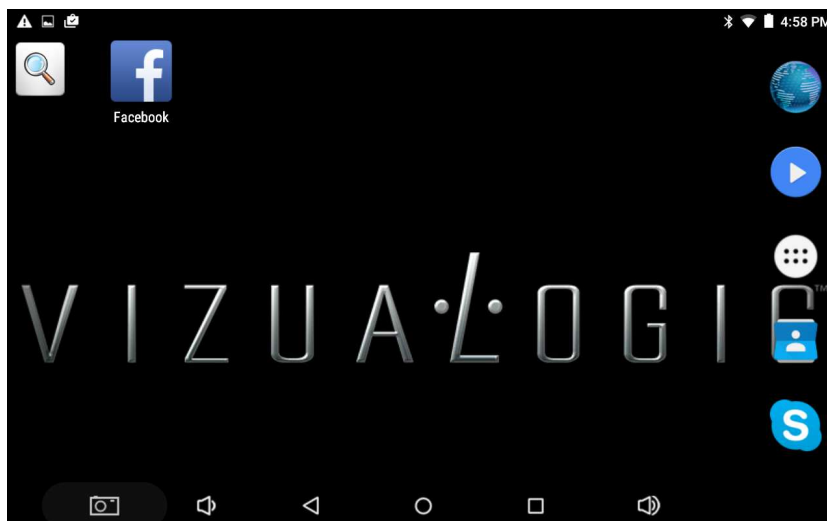
How To Navigate The Home Screen When Undocked

Your Vizualogic Tablet supports standard Android navigation.

This section will teach you how to control the Tablet when undocked from the vehicle.

1. Navigation bar: These icons provide common navigation functions, such as return to the previous screen, open the main Home screen, and view recently opened apps.
2. System bar: System icons show the Wi-Fi signal strength, battery level, Bluetooth connectivity, the Time and other statuses.

-  Speaker -: Turns volume down
-  Back: Return to previous screen
-  Home: Return to the main Home screen
-  Recent Apps: View apps that are currently open, in order of recent use
-  Speaker +: Turns volume up



Customer Service Technical Support

For all your technical needs please call our Customer Service Technical Support number @ 800-624-7960 ext 131

The logo for VIZUALOGIC™ is displayed in a metallic, 3D-style font against a black background. The letters are spaced out, and the 'L' in 'LOGIC' is stylized with a dot above it. A small 'TM' trademark symbol is located at the top right of the final 'C'.