

# 2018 Land Rover Motorized Headrest Removal

1. Remove plastic panel on the top of the seat.



2. Remove the seatback from the seat. The photo on the left shows the entire seatback removed from the seat. The photo on the right is a photo of the bottom clip locations on the seatback.




3. Once the seatback has been removed, locate the headrest motorization plugs found on the inside of the seat on the right side. With the vehicle powered off, unplug both motorization plugs. (Note: the plugs will be attached to a cable that will run up the right headrest post.)



4. Once the headrest plugs have been unplugged, proceed to headrest removal. Start by looking down into the top of the seat and locate the white colored post guides that the headrest posts slide into inside of the seat.



5. Using a flat head screw driver, press down on the black plastic release button located on the back side of the white post guide. This will need to be done for both posts in order to remove the headrest. (Note: Remove the headrest carefully. The plugs that run through the post into the headrest will need to be run through the post guide slowly one by one.)

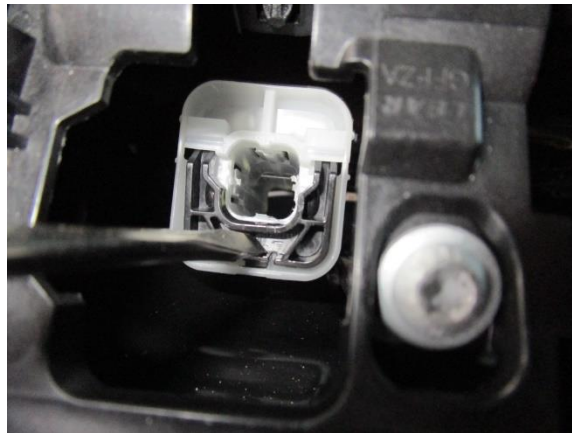

6. You are now ready to start the installation of the Vizualogic headrests. Unlike the factory headrests, our headrests do stay in a fixed position and are not motorized.

For any other questions, tips, or tricks, feel free to contact our customer service department at **(800) 595-7571** or by e-mail through our website at [www.vizualogicdirect.com/customer-service](http://www.vizualogicdirect.com/customer-service).